

## Installation for Front seat covers

Exact fit seat covers  
MADE IN THE USA

(Allow 45 minutes)

WEAR SAFETY GLASSES


### There are several types of front covers: Buckets w/Adjustable Headrest or Molded-Bench Split 60/40, 40/20/40 or Solid

1. Remove headrest if applicable, pull on headrest cover and secure Velcro.
2. Pull on **seat backs** bringing the cover down evenly on each side and make sure the headrest opening is lined up and the side openings are in the proper location (airbag openings towards the door) Slowly work the fabric over the seat, as the foam backing will tend to grip the original factory upholstery. Slide your hand down the material and guide it into the seats and work on firmly until in place matching edges with seams. This will encourage the material to create a snug, exact fit. **Do not use excessive force.** Push the bottom flap at the front through the fold in the seat and connect the flap at the seat's back and secure Velcro strips. If the fold is blocked connect the Velcro piece from the seat back to the Velcro piece on the seat bottom.

**NOTE:** If there are integrated seatbelts you **MUST** slide the seat cover between the seat belt and the seat cushion and then proceed with the appropriate attachments.

3. Look at **seat bottom** to determine driver or passenger side (Electric Panels or control side will often times make the sides a bit different) –

**NOTE:** A flap might need to be removed to proceed if applicable. Pull the elastic bands forward to disengage, attach the cover then reattach the flap. If this flap is present attach the top to the bottom see picture →

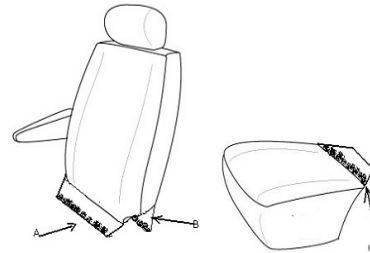

4. Fit the cover onto the seat bottom so the front lies flat and seams match.
5. If long Velcro strap is present at side, insert strap behind the plastic panel unless cut out is there as in older models (2000 and below) **Please, be patient, there is an opening.**
6. If there rubber tube pieces along the seat bottom edge, push them snugly into place between seat and plastic edging.
7. Push seat forward and reach around the back of the seat and connect Velcro from side to side.
8. Pull the straps underneath the seat and attach to buckles at the front and pull tight. **(Do not exceed 10lbs of pressure.** Connect the shock cords if applicable for your seat bottom.
9. Readjust straps after a couple of weeks allowing set covers to conform completely to your seats.

VELCRO ON THE BACKREST FRONT (A) WILL ATTACH TO THE BOTTOM SECTION FLAP IN THE SEAM (C). FLAP (B) WILL ATTACH TO THE ORIGINAL UPHOLSTERY ON THE BACK OF THE SEAT.

**CLEANING: MACHINE WASH (FRONT LOAD GENTLE CYCLE ONLY) HANG DRY,**  
(for stains, follow upholstery cleaner instructions).

**FOR ADDITIONAL INSTALL ASSISTANCE PLEASE CONTACT US**